



Adjusting Focus Manually

Set this when the focus is not clear in Intelligent Auto or when manual focusing is desired.

1 Tap "MENU".

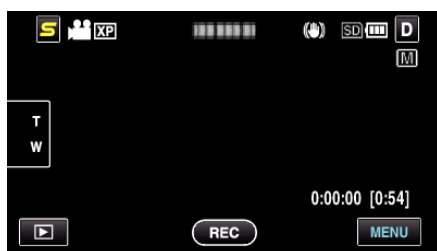


2 Tap "FOCUS".

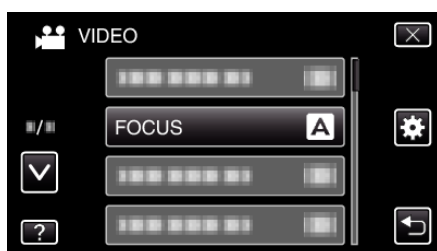


- Tap $\wedge$ or $\vee$ to move upward or downward for more selection.
- Tap $\times$ to exit the menu.
- Tap $\hookrightarrow$ to return to the previous screen.

3 Tap "MANUAL".

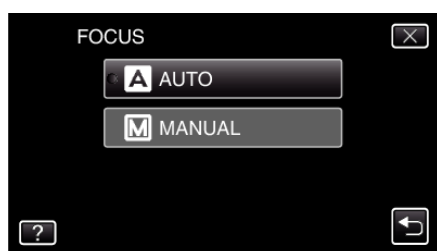


4 Adjust the focus.

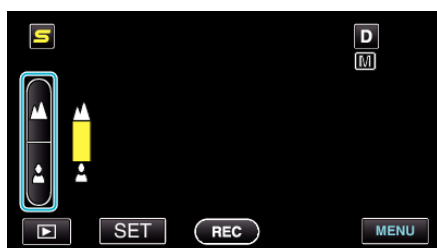

- Tap $\blacktriangle$ to focus on a distant subject.
- Tap $\blacktriangledown$ to focus on a near subject.

5 Tap "SET" to confirm.

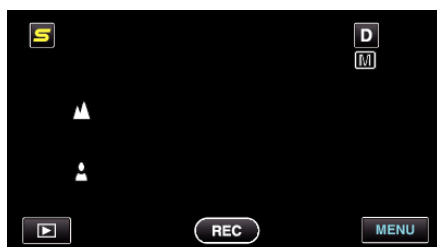

- When focus is confirmed, the focusing frame disappears and $\blacktriangle$ and $\blacktriangledown$ are displayed. (The icons may appear blinking.)

Memo : _____

- A subject that is focused at the telephoto (T) end remains in focus when it is zoomed out to the wide angle (W) end.