 



# Playing Back Still Images

You can select and play back the recorded still images from an index screen (thumbnail display).

1 Select still image mode.

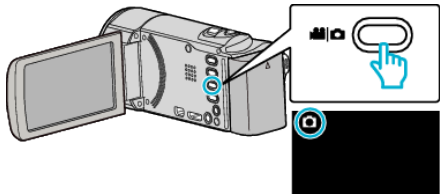

 2 Tap to select the playback mode.

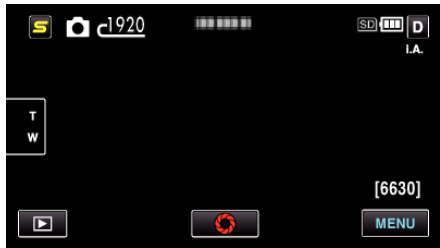


3 Tap on the file to start playback.



- Still images that are recorded continuously within 2 seconds or with the continuous shooting mode will be grouped together. Only the first recorded file is shown and the group is displayed with a green frame.
- Tap to select the media for playback.
- Tap to return to the index screen.
- Tap to return to the recording mode.

## Operation Buttons for Still Image Playback

 
### During Index Screen Display

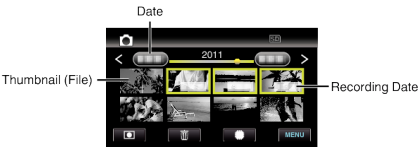

 - Still images that are recorded continuously within 2 seconds or with the continuous shooting mode will be grouped together. Only the first recorded file is shown and the group is displayed with a green frame.





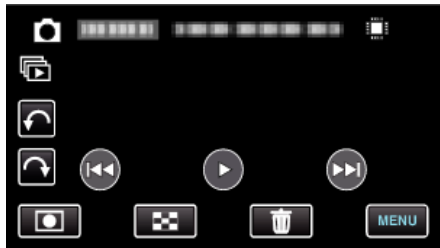




Display	Description
Date	Moves to the previous/next date
<	Displays the previous index screen (thumbnail display)
>	Displays the next index screen (thumbnail display)
Thumbnail (File)	Tap on thumbnail - Starts playback Flick to right - Scrolls to the right to show the previous index screen (thumbnail display) Flick to left - Scrolls to the left to show the next index screen (thumbnail display)
Recording Mode	Switches to recording mode
	Switches between the index screen of the built-in memory and SD card
	Displays the index screen (thumbnail display) to perform deletion
MENU	Displays the menu screen
Recording Date	Recording date (only displayed on the first file of each date)

### During Still Image Playback



Display	Description
	Returns to the previous still image
	Starts/pauses slideshow

Playback

	Reverse playback during slideshow
	Normal playback during slideshow
	Advances to the next still image
Recording Mode 	Switches to recording mode
	Returns to index screen
	Deletes the currently selected file
MENU	Displays the menu screen
	Rotates to the left (rotates by -90° with each tap)
	Rotates to the right (rotates by 90° with each tap)
	Continuous playback of still images captured by continuous shooting

Memo : \_\_\_\_\_

- Tap or drag on the operation area of the touch screen.
- Operations buttons on the touch screen disappear if the unit is not operated for about 3 seconds. Tap on the screen to display the operation buttons again.
- You can rotate a still image 90° to the right or left during playback. Rotation applies to the on-screen display only.
- You can search for a specific file by the recording date. This is useful when searching from a large number of files.

Caution : \_\_\_\_\_

- This unit is a microcomputer-controlled device. Electrostatic discharge, external noise and interference (from a TV, a radio, etc.) might prevent it from functioning properly. In such a case, turn off the power, then remove the AC adapter and battery pack. This unit will be reset.