


Common Recording Indications

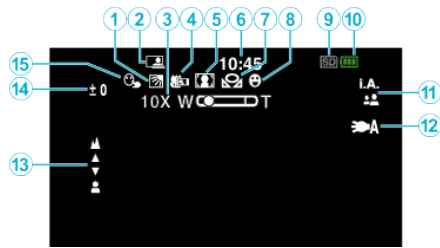

- 1** Backlight Compensation
- 2** Auto REC
- 3** Zoom
- 4** Tele Macro
- 5** Scene Select
- 6** Date/Time
- 7** White Balance
- 8** Smile Shot
- 9** Media
- 10** Battery Indicator
- 11** Recording Mode
- 12** Light (GZ-HM445/GZ-HM446/GZ-HM650/GZ-HM655)
- 13** Focus
- 14** Brightness
- 15** Touch Priority AE/AF