


WIND CUT

Reduces the noise caused by wind.

Setting	Details
OFF	Deactivates the function.
ON	Activates the function.

Displaying the Item

1 Select video mode.

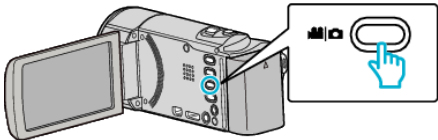

2 Tap  to select the recording mode.



- The mode changes between recording and playback with every tap.

3 Tap "MENU".



4 Tap "WIND CUT".

