REC STILLS TO SLOTS (GZ-HM440/GZ-HM445/GZ-HM446)

Sets the recording/playback SD card slot of still images.

Setting	Details
SLOT A	Records still images to the SD card in slot A.
SLOT B	Records still images to the SD card in slot B.

Displaying the Item

1 Tap "MENU".



2 Tap "**禁**".



3 Tap "REC STILLS TO SLOTS".

