

Scene Selection

Common scenes that are often encountered can be recorded with the most suitable settings.

1 Tap "MENU".




2 Tap "SCENE SELECT".



- Tap ^ or v to move upward or downward for more selection.
- Tap X to exit the menu.
- Tap ↶ to return to the previous screen.

3 Tap the appropriate scene.

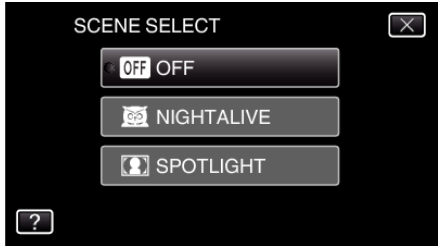

- Tap X to exit the menu.
- After setting, the selected scene is immediately put on view.

*The image is only an impression.

Setting	Effect
 NIGHTALIVE	Increases gain and brightens the scene automatically using a slow shutter when the surrounding is dark. To prevent camera shake, use a tripod. OFF ON
 SPOTLIGHT	Prevents the human subject from appearing too bright under light. OFF ON

Memo :

- All scenes of "SCENE SELECT" cannot be set during "TIME-LAPSE RECORDING".