

SEAMLESS RECORDING


Continues recording on the SD card without stopping when the remaining space on the built-in memory or slot A runs out.

Setting	Details
OFF	Does not switch recording media automatically.
ON	Switches recording media automatically.

- Memo :**
- Seamless recording cannot be performed if there is not enough free space in the SD card.
 - The seamless recording setting switches to “OFF” automatically after seamless recording is complete.
 - To start seamless recording again after the previous session is complete, it is necessary to combine seamless videos, or delete the combination information of the seamless videos.

Displaying the Item

1 Select video mode.

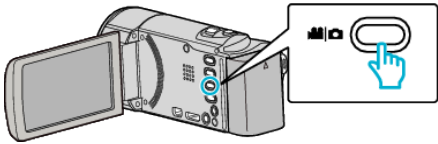


2 Tap  to select the recording mode.



- The mode changes between recording and playback with every tap.

3 Tap “MENU”.

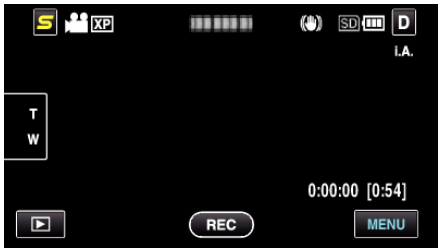

4 Tap “SEAMLESS RECORDING”.

