 


Playing Back Videos

You can select and play back the recorded videos from an index screen (thumbnail display).

1 Select video mode.

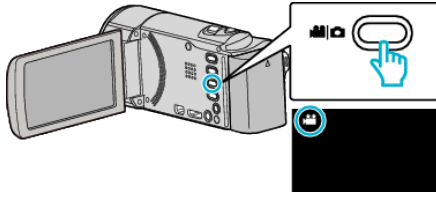

2 Tap to select the playback mode.



 
3 Tap on the file to start playback.



- Tap to select the media for playback.
- Tap to pause.
- Tap to return to the index screen.
- Tap to return to the recording mode.

 
Operation Buttons for Video Playback

During Index Screen Display

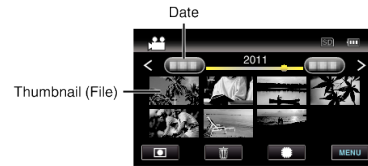





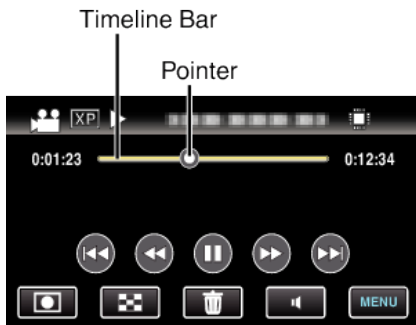

| Display | Description |
|------------------|--|
| Date | Moves to the previous/next date |
| < | Displays the previous index screen (thumbnail display) |
| > | Displays the next index screen (thumbnail display) |
| Thumbnail (File) | Tap on thumbnail - Starts playback Flick to right - Scrolls to the right to show the previous index screen (thumbnail display) Flick to left - Scrolls to the left to show the next index screen (thumbnail display) |
| Zoom Lever | Displays the previous/next index screen (thumbnail display) |
| Recording Mode | Switches to recording mode |
| | Displays the index screen (thumbnail display) to perform deletion |
| | Switches between the index screen of the built-in memory and SD card |
| MENU | Displays the menu screen |

During Video Playback



| Display | Description |
|--------------|---|
| Pointer | Displays the current estimated playback position within the scene |
| Timeline Bar | Tap on a random position - Moves to the tapped position Drag playback point to the left or right - Starts playback from the new position |
| | Returns to the beginning of the scene |
| | Reverse search |
| | Playback/pause |

Playback

| | |
|---|-------------------------------------|
|  | Forward search |
|  | Advances to the next video |
| Recording Mode  | Switches to recording mode |
|  | Stop (returns to index screen) |
|  | Deletes the currently selected file |
|  | Volume adjustment |
| MENU | Displays the menu screen |

Memo :

- Tap or drag on the operation area of the touch screen.
- Operations buttons on the touch screen disappear if the unit is not operated for about 3 seconds. Tap on the screen to display the operation buttons again.
- You can search for a specific file by the recording date.

Caution :

 
- Make a backup of important recorded data.
It is recommended to copy your important recorded data to a DVD or other recording media for storage.
- This unit is a microcomputer-controlled device. Electrostatic discharge, external noise and interference (from a TV, a radio, etc.) might prevent it from functioning properly. In such a case, turn off the power, then remove the AC adapter and battery pack. This unit will be reset.



Adjusting the Volume of Videos

You can tap on the volume adjustment button to control the volume.

1 Tap .

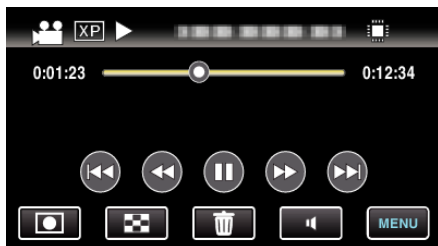



2 Tap "+" or "-".



- Volume can also be adjusted using the zoom lever during playback.



- When  is tapped, the volume adjustment bar remains on the screen even after 1 second of no operation.
- Tap  to exit volume adjustment.
- Volume adjustment is disabled when an AV cable (audio/video) or HDMI cable is connected.

Checking the Recording Date and Other Information

1 Press the INFO button.

You can display the recording date and duration of the selected file.