

PLAYBACK FAILED

Remove and re-insert the SD card.

Remove any dirt from the SD card terminals.

Insert the SD card before turning on the power.

Do not subject this unit to any strong impact or vibration.