


## Rear

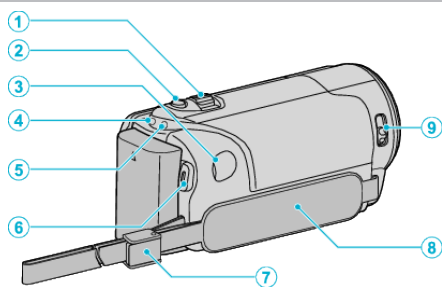

- 1** Zoom/Volume Lever
  - During shooting: Adjusts the shooting range.
  - During playback (index screen): Moves to the next or previous page.
  - During video playback: Adjusts the volume.
- 2** SNAPSHOT (Still Image Recording) Button
  - Takes a still image.
- 3** DC Connector
  - Connects to an AC adapter to charge the battery.
- 4** ACCESS (Access) Lamp
  - Lights up/blinks during recording or playback.
  - Do not remove the battery pack, AC adapter, or SD card.
- 5** POWER/CHARGE (Power/Charge) Lamp
  - Lights up: Power "ON"
  - Blinks: Charging in progress
  - Goes out: Charging finished
- 6** START/STOP (Video Recording) Button
  - Starts/stops video recording.
- 7** Strap Lock
- 8** Grip Belt
  - Pass your hand through the grip belt to hold this unit firmly.
- 9** Lens Cover Switch
  - Opens and closes the lens cover.