Cargar la batería en el extranjero

La forma del tomacorriente varía según el país y la región.
Para cargar la batería, necesita un enchufe adaptador que coincida con la forma del tomacorriente.

| Α | В | BF | С | 0 |
|-----|-----|----|-------------|------------------------------------|
| [1] | ••• | | ⊙ ⊕≖ | $\bigcirc\bigcirc\bigcirc\bigcirc$ |

| | • • | _ | <u> </u> | | | |
|----------------------------|----------------|------|-------------|-----|--------------------------|--|
| North America | Europe | | Oceania | | Middle East | |
| United States A | Iceland | С | Australia | 0 | Israel C | |
| Canada A | Ireland | С | Guam | Α_ | Iran C | |
| Mexico A | United Kingdom | B.BF | Tahiti | С | Kuwait B.C | |
| Asia | Italy | С | Tonga | 0 | Jordan B.BF | |
| Asia | Austria | C | New Zealand | 0 | 46.0 | |
| India B.C.BF | Netherlands | С | ЕШ | 0 | Africa | |
| Indonesia C | Canary Islands | C | Latin | | Algeria A.B.BF.C | |
| Singapore B.BF | Greece | C | Latin | | Egypt B.BF.C | |
| Sri Lanka B.C.BF | Switzerland | С | Argentina | 0 | Guinea C | |
| Thailand A.BF.C | Sweden | C | Colombia | А | Kenya B.C | |
| South Korea A.C | Spain | A.C | Jamaica | А | Zambia B.BF | |
| China A.B.BF.C.O | Denmark | С | Chile | B.C | Tanzania B.BF | |
| Japan A | Germany | С | Haiti | Α | Republic of South Africa | |
| Nepal C | Norway | С | Panama | _A_ | B.C.BF | |
| Pakistan B.C | Hungary | С | Bahamas | А | Mozambique C | |
| Bangladesh C | Finland | C | Puerto Rico | A | Morocco C | |
| Philippines A.BF.O | France | С | Brazil | A.C | | |
| Vietnam A.C | Belgium | С | Venezuela | Α. | | |
| Hong Kong Special | Poland | B.C | Peru | A.C | | |
| Administrative Region B.BF | Portugal | B.C | | | | |
| Macau Special | Romania | C | | | | |
| Administrative Region B.C | | | | | | |
| Malaysia B.BF.C | | | | | | |