
The remote control does not work.

Replace the battery.

Set "REMOTE" in the "COMMON" menu to "ON".

The remote control may not operate outdoors or in places exposed to strong light.