

CONT. SHOOTING SPEED


Sets the speed for continuous shooting.

Setting	Details
HIGH SPEED	<ul style="list-style-type: none">Shoots up to 40 still images continuously in the still image mode in about 3.2 second.Shoots up to 40 still images continuously in the video mode in about 0.8 second.
MEDIUM SPEED	<ul style="list-style-type: none">Shoots up to 40 still images continuously in the still image mode in about 6.4 second.Shoots up to 40 still images continuously in the video mode in about 4.8 second.
LOW SPEED	Shoots continuously until the recording media is full.


- Memo :**
- Shooting speed slows down gradually as continuous shooting goes on in the “LOW SPEED” mode.
 - “HIGH SPEED” and “MEDIUM SPEED” are not available when image size is set to “2656X1992(5.3M)” in the still image recording mode.
 - Performing continuous shooting while video recording is in progress switches the mode to “LOW SPEED” temporarily.

Displaying the Item

- 1 Select still image mode.

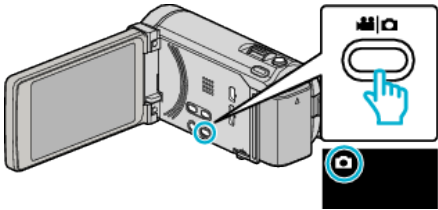

- 2 Tap “MENU”.

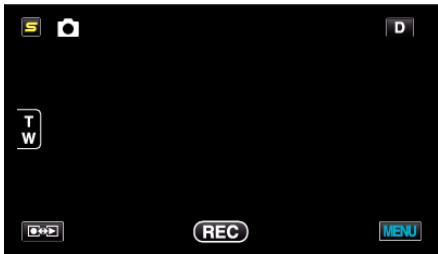

- 3 Tap “CONT. SHOOTING SPEED”.

