


## Adjusting Focus Manually

Set this when the focus is not clear in Intelligent Auto or when manual focusing is desired.

- 1 Tap "MENU".

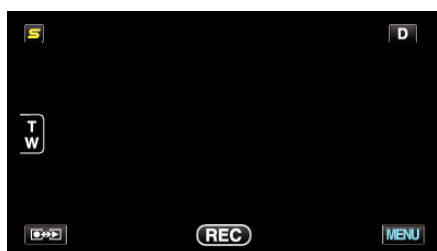


- 2 Tap "FOCUS".




- Tap ^ or v to move upward or downward for more selection.
- Tap X to exit the menu.
- Tap ↶ to return to the previous screen.

- 3 Tap "MANUAL".

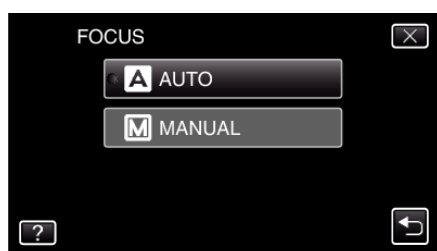


- 4 Adjust the focus.

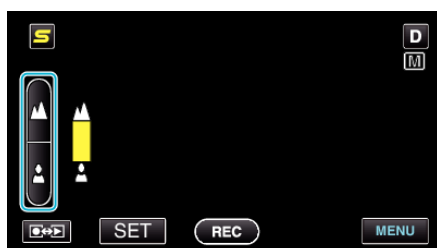

- Tap ▲ to focus on a distant subject.
- Tap 👤 to focus on a near subject.

- 5 Tap "SET" to confirm.

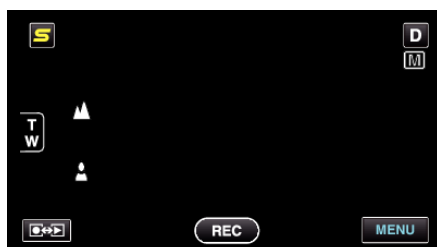

- When focus is confirmed, the focusing frame disappears and ▲ and 👤 are displayed. (The icons may appear blinking.)

**Memo :** \_\_\_\_\_

- A subject that is focused at the telephoto (T) end remains in focus when it is zoomed out to the wide angle (W) end.