


Preparing a DVD Writer (CU-VD50)

1 Connect the USB cable and the AC adapter.

- Turn off the camcorder by pressing the  button for about 2 seconds.

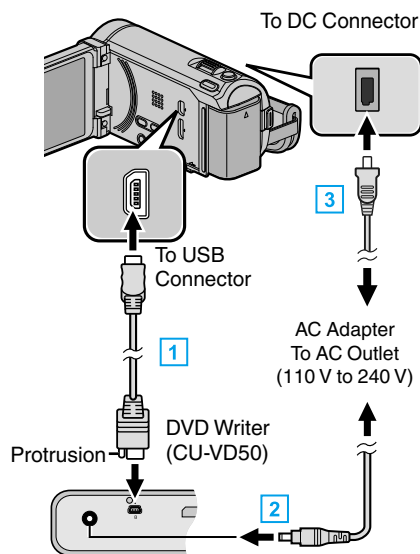

* The AC adapter shown in the illustration is AC-V10M.


1 Connect the USB cable provided with the DVD writer.

2 Connect the AC adapter of the DVD writer.

3 Connect the AC adapter to this unit.

- This unit powers on automatically when the AC adapter is connected.
- This unit turns on and the "BACK-UP" menu appears.
- While the USB cable is connected, the "BACK-UP" menu is displayed.
- Refer also to the instruction manual of the DVD writer.

2 Turn on the DVD writer and insert a new disc.

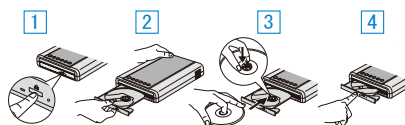

1 Press the power button to turn on the power.

2 Press the eject button to open the disc tray.

3 Pull out the tray completely and load a new disc properly.

4 Push the disc tray in until it clicks into place.

Caution :

- Be sure to turn off the power when connecting the devices. Otherwise, electric shocks or malfunctions may occur.

Memo :

- All buttons on the DVD writer CU-VD50, other than the power and eject buttons, will not work when connected to this unit.