

SLIDE SHOW EFFECTS (for GZ-HM870/GZ-HM860/GZ-HM855)

Sets the transition effects in slideshow playback.


Setting	Details
SLIDE	Switches the screen by sliding in from right to left.
BLINDS	Switches the screen by dividing into vertical strips.
CHECKERBOARD	Switches the screen by changing through a checkered pattern.
RANDOM	Switches the screen with a random effect from "SLIDE", "BLINDS", and "CHECKERBOARD".

Memo :

- Slideshow effects are not available when playing back still images in external devices (such as USB external hard disk drives).

Displaying the Item

- 1 Select still image mode.

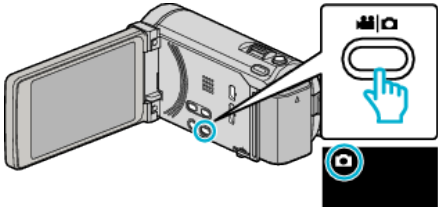

- 2 Tap  to select the playback mode.



- 3 Tap "MENU".



- 4 Tap "SLIDE SHOW EFFECTS".

