


## Common Recording Indications

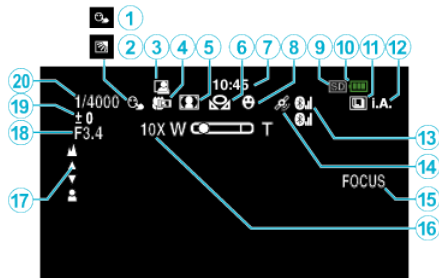

- 1** TOUCH PRIORITY AE/AF
- 2** Backlight Compensation
- 3** Auto REC
- 4** Tele Macro
- 5** Scene Select
- 6** White Balance
- 7** Time
- 8** Smile Shot
- 9** Media
- 10** Battery Indicator
- 11** Continuous Shooting
- 12** Recording Mode
- 13** Radio Reception Status (for GZ-HM970/GZ-HM870/GZ-HM860)
- 14** GPS Communication Status (for GZ-HM970/GZ-HM870/GZ-HM860)
- 15** Focus Assist
- 16** Zoom
- 17** Focus
- 18** APERTURE PRIORITY
- 19** Brightness
- 20** Shutter Speed