Verifying the Accessories

If any of the items are missing or defective, consult your JVC dealer or the nearest JVC service center.

Illustration	Description
	AC Adapter AC-V10M (for GZ-HM870/GZ-HM860/GZ-HM855) Connects to this unit to charge the battery pack. It can also be used when recording or playing back videos indoors.
	AC Adapter AP-V30M (for GZ-HM970/GZ-HM965) Connects to this unit to charge the battery pack. It can also be used when recording or playing back videos indoors.
b	Battery Pack BN-VG114E • Attaches to this unit to supply power.
	Remote Control RM-V760U • Operates certain functions from a distance.
	HDMI Mini Cable ● Connects this unit to a TV to play back recorded images on the TV in a better quality.
	AV Cable Connects this unit to a TV to play back recorded images on the TV.
	USB Cable (Type A - Mini Type B) ● Connects this unit to a computer.
	Core Filter (Large)×2 (for AV Cable and optional Component Cable) Core Filter (Small) (for AC Adapter) • The core filter reduces interference when this unit is connected to other devices.

Getting Started

Plug Adapter (certain AS destinations only)
Basic User Guide Read well and keep in a safe place where it can be accessed easily when necessary.

Memo: -

- SD cards are sold separately.
- When using the AC adapter overseas, please prepare a commercially available converter plug for the country or region of visit.