
RECORDING CANCELLED

Set "REC MEDIA FOR VIDEO" to "SD", then record to an SD card.

Turn off and on this unit again.

Protect the unit from vibration and shock.