



Backing Up All Files

Before making backup, make sure that enough free space is left in the computer's hard disk (HDD).

1 Open the LCD monitor.

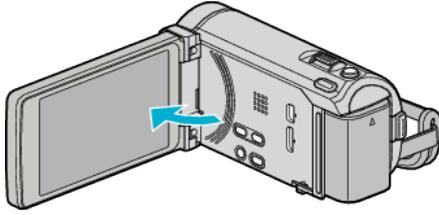

2 Connect the USB cable and the AC adapter.

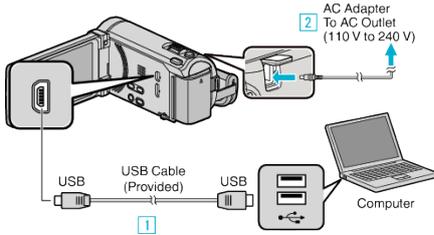

* The AC adapter shown in the illustration is AC-V10M.

- 1 Connect using the provided USB cable.
 - 2 Connect the AC adapter to this unit.
- This unit powers on automatically when the AC adapter is connected.
 - Be sure to use the supplied JVC AC adapter.
 - 3 The "SELECT DEVICE" menu appears.
- 3 Tap "CONNECT TO PC".




4 Tap "BACK UP".



- Tap X to exit the menu.
- Tap ↶ to return to the previous screen.
- The provided software Everio MediaBrowser 3 BE starts up on the computer.
The subsequent operations are to be performed on the computer.

5 Select the volume.

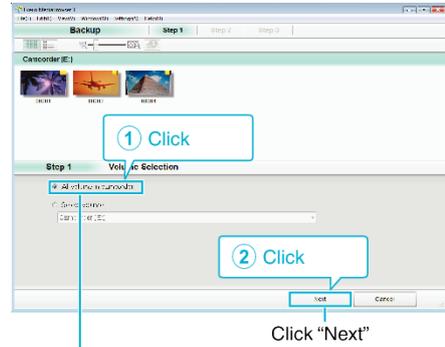


Click "All volume in camcorder"

6 Start backup.



- Backup starts.

7 After backup is complete, click "OK".

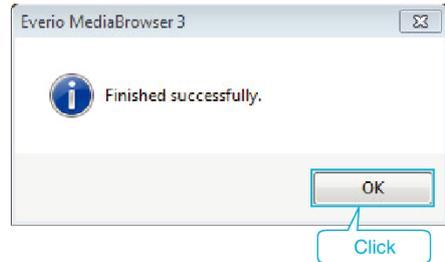

Memo :


- Before making backup, load the SD card in which the videos and still images are stored on this unit.
- If you encounter any problems with the provided software Everio MediaBrowser 3 BE, please consult the "Pixela User Support Center".

Telephone	USA and Canada (English): +1-800-458-4029 (toll-free) Europe (UK, Germany, France, and Spain) (English/German/French/Spanish): +800-1532-4865 (toll-free) Other Countries in Europe (English/German/French/Spanish): +44-1489-564-764 Asia (Philippines) (English): +63-2-438-0090 China (Chinese): 10800-163-0014 (toll-free)
Homepage	http://www.pixela.co.jp/oem/jvc/mediabrowser/e/

- Delete unwanted videos before making backup.
It takes time to back up many videos.

Disconnecting this Unit from Computer

1 Click "Safely Remove Hardware and Eject Media".

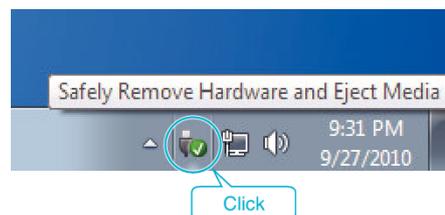

- 2 Click "Safely Remove USB Mass Storage Device".
- 3 (For Windows Vista) Click "OK".

- 4 Disconnect the USB cable and close the LCD monitor.