 


Playing Back Videos

You can select and play back the recorded videos from an index screen (thumbnail display).

1 Select video mode.

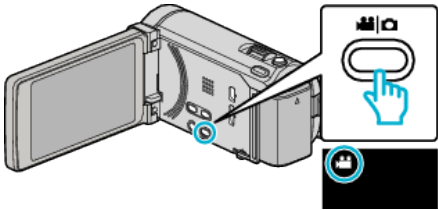

2 Tap to select the playback mode.



 
3 Tap on the file to start playback.



- Tap to select the media for playback.
- Tap to pause.
- Tap to return to the index screen.


Operation Buttons for Video Playback

During Index Screen Display

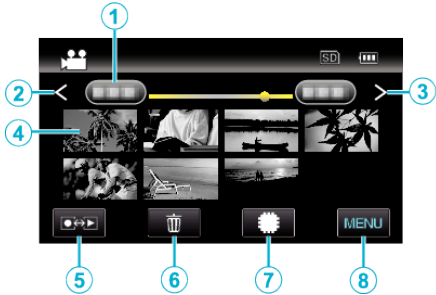

	Display	Description
①	Date	Moves to the previous/next date
②	<	Displays the previous index screen (thumbnail display) <ul style="list-style-type: none"><li>• You can perform the same operation with the zoom lever.</li></ul>
③	>	Displays the next index screen (thumbnail display) <ul style="list-style-type: none"><li>• You can perform the same operation with the zoom lever.</li></ul>
④	Thumbnail (File)	Tap on thumbnail - Starts playback Drag to right - Scrolls to the right to show the previous index screen (thumbnail display) Drag to left - Scrolls to the left to show the next index screen (thumbnail display)
⑤	Recording/Playback Mode 	Switches between recording and playback modes.
⑥		Displays the index screen (thumbnail display) to perform deletion
⑦		Switches between the index screen of the built-in memory and SD card
⑧	MENU	Displays the menu screen

 During Video Playback

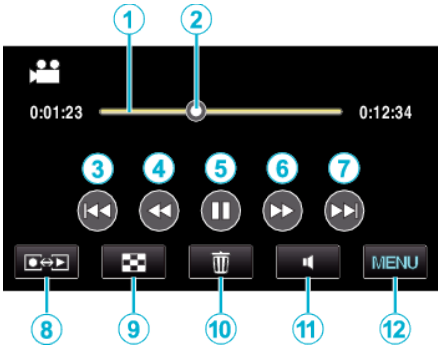

	Display	Description
①	Timeline Bar	Tap on a random position - Moves to the tapped position Drag playback point to the left or right - Starts playback from the new position
②	Pointer	Displays the current estimated playback position within the scene
③	⏮	Returns to the beginning of the scene
④	⏮	Reverse search
④	⏮	Reverse slow-motion / Press and hold to start reverse slow playback
⑤	▶/⏸	Playback/pause
⑥	⏭	Forward search
⑥	⏭	Forward slow-motion / Press and hold to start slow playback
⑦	⏭	Advances to the next video
⑧	Recording/Playback Mode 📹/▶	Switches between recording and playback modes.
⑨	⏹	Stop (returns to index screen)
⑩	🗑	Displays the index screen (thumbnail display) to perform deletion
⑪	🔊	Volume adjustment
⑫	MENU	Displays the menu screen

Memo :

- Tap or drag on the operation area of the touch screen.
- Operations buttons on the touch screen disappear if the unit is not operated for about 5 seconds. Tap on the screen to display the operation buttons again.
- You can search for a specific file by the recording date.

 
Caution :

- Make a backup of important recorded data.  
It is recommended to copy your important recorded data to a DVD or other recording media for storage.
- This unit is a microcomputer-controlled device. Electrostatic discharge, external noise and interference (from a TV, a radio, etc.) might prevent it from functioning properly. In such a case, turn off the power, then remove the AC adapter and battery pack. This unit will be reset.
- Make a backup of important recorded data.  
It is recommended to copy your important recorded data to a DVD or other recording media for storage.  
JVC will not be responsible for any lost data.

Adjusting the Volume of Videos

You can tap on the volume adjustment button to control the volume.


1 Tap 🔊.

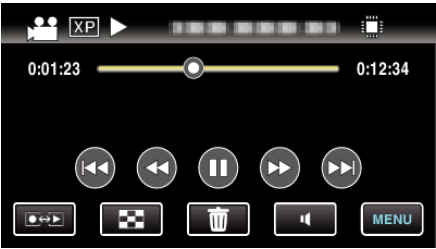

2 Tap “+” or “-”.



 - Volume can also be adjusted using the zoom lever during playback.



- Tap X to exit volume adjustment.
- Volume adjustment is disabled when an AV cable (audio/video) or HDMI cable is connected.

Checking the Recording Date and Other Information

1 Pause the playback and press the INFO button.

You can display the recording date and duration of the selected file.

