

FLASH


For setting the flash.

Setting	Details
OFF	Flash does not fire.
AUTO	Flash fires automatically when the surrounding is dark.
AUTO RED-EYE	Fires a pre-flash to reduce red-eye effects.
ON	Fires flash at all times.
SLOW SYNCHRO	Fires flash at all times, and slows down the shutter speed to capture both the subject and background brightly.


- Memo :**
- The flash icon displayed on the screen blinks while the flash is charging.
 - The flash does not fire when “ISO6400” in “GAIN”, “NIGHTALIVE”, “NIGHT”, or “SNOW” in “SCENE SELECT”, or “SHUTTER MODE” are set.

Displaying the Item

1 Select still image mode.

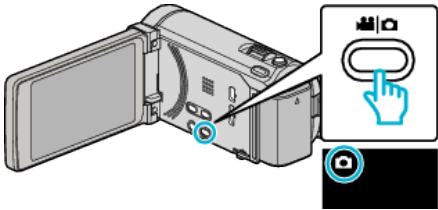

2 Tap “MENU”.

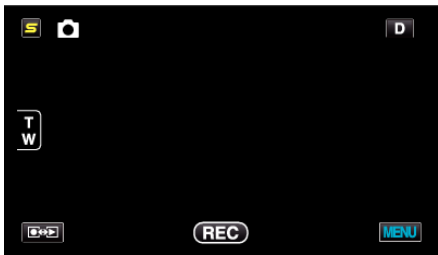

3 Tap “FLASH”.

