


## Playing Back with a DVD Writer

You can play back the DVDs created on this unit.

- 1 Prepare a DVD writer.
  - Insert the DVD to play back into the DVD writer.
- 2 Tap “PLAYBACK” in the BACK-UP menu.

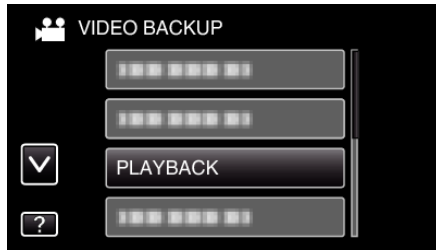

- An index screen (thumbnail display) of the videos in the disc appears.

- 3 Tap on the file to start playback.



- Tap “←” to return to the “BACK-UP” menu.
- For details on video playback, refer to ““Operation Buttons for Video Playback” (p. 0 )”.
- To exit, stop playback and turn off the camcorder by pressing the ⏻ button for about 2 seconds. Then, disconnect the USB cable.

### Memo :

- When playing back a disc created in DVD-Video format, no information such as date and time will be displayed.
- Discs created with a DVD writer or external Blu-ray drive as well as files copied to an external hard disk drive can be converted to 3D for playback. (for GZ-HM970/GZ-HM965)