

DATE DISPLAY STYLE

Sets the order of year, month, day and the time display format (24H/12H).


- 1 Tap "MENU".




- 2 Tap .



- 3 Tap "DATE DISPLAY STYLE".

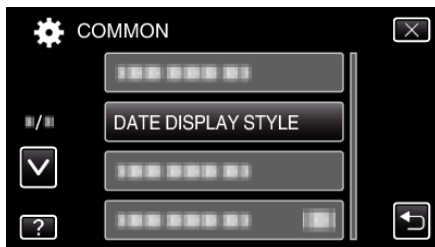

- 4 Tap to set the style of date and time display.

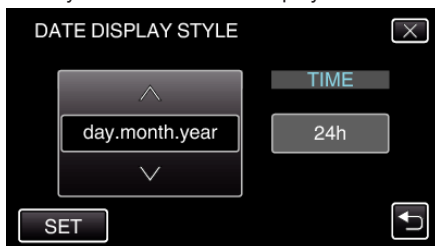

- For date display, set to any format from "month.day.year", "year.month.day", and "day.month.year".
- For time display, set to any format from "12h" and "24h".
- Tap the operation buttons $\leftarrow$ / $\rightarrow$ to move the cursor.
- After setting, tap "SET".