

3D DISPLAY WARNING (for GZ-HM970/GZ-HM965)

Sets whether to display warnings during 3D playback.

Setting	Details
OFF	Hides 3D warning displays.
ON	Shows 3D warning displays at a regular interval.

Displaying the Item

1 Tap “MENU”.



2 Tap .



3 Tap “3D DISPLAY WARNING”.

