


Rear

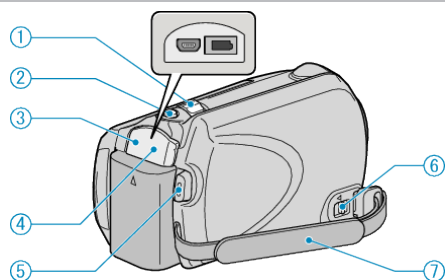

- 1** Zoom/Volume Lever
 - During shooting: Adjusts the shooting range.
 - During playback (index screen): Changes the number of images to display.
 - During video playback: Adjusts the volume.
- 2** SNAPSHOT (Still image recording) Button
 - Takes a still image.
- 3** USB Terminal
 - Connects to PC using a USB cable.
- 4** DC Terminal
 - Connects to an AC adapter to charge the battery.
- 5** START/STOP (Video recording) Button
 - Starts/stops video recording.
- 6** Grip Belt Release Lever
 - Allows the grip belt to be removed and used as a hand strap.
- 7** Grip Belt
 - Pass your hand through the grip belt to hold this unit firmly.