DELETE DATA ON HDD

Execute this process when disposing of this unit or passing it to another person.

1 Touch em to display the menu.



2 Select "MEDIA SETTINGS" and touch @.



3 Select "DELETE DATA ON HDD" and touch ®.



4 Select "YES" and touch ®.



• After deleting the data, touch .

Caution:

• Connect the AC adapter as it may take some time to delete data.

Memo:

• Repeat the process to make data restoration even more difficult.