

PLAYBACK FAILED

Remove and re-insert the microSD card.
 Remove any dirt from the microSD card terminals.
 Insert the microSD card before turning on the power.
 Do not subject this unit to strong impact/vibrations.