Scene Selection

Common scenes that are often encountered can be recorded with the most suitable settings.

Touch en to display the menu.



2 Select "MANUAL SETTING" and touch @.



3 Select "SCENE SELECT" and touch ®.



4 Select the scene and touch .



Setting	Effect
M NIGHT EYE	Increases gain and brightens the scene automatically when the surrounding is dark. To prevent camera shake, use a tripod. OFF ON
■ SPOTLIGHT	Prevents the human subject from appearing too bright under light. OFF ON

^{*}The image is only an impression.