

---

**Unable to copy to microSD card.**

To record to the card, it is necessary to perform media settings.

To use cards that have been used on other devices, it is necessary to format (initialize) the card using “FORMAT SD CARD” from media settings.