

 
## Deleting the Currently Displayed File

Deletes the currently displayed file.


### Caution :

- Deleted files cannot be restored.

- 1 Select the playback mode.

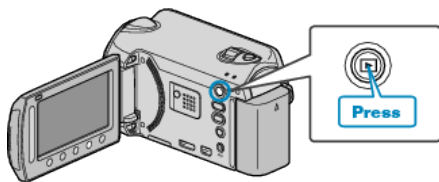

- 2 Select video or still image mode.

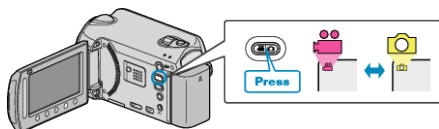 


- 3 Touch to display the menu.



- 4 Select "DELETE" and touch .



 - 5 Select "CURRENT" and touch .

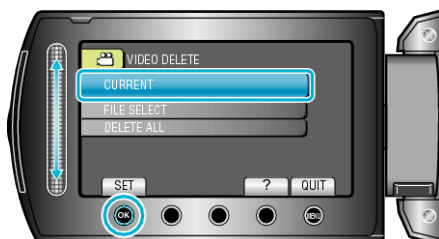

- 6 Check that it is the file to delete, select "YES" and touch .



- The file to delete appears on this screen.
- Touch the operation buttons "←" / "→" to select the previous or next file.
- After deleting, touch .

### Memo :

- When files in a playlist are deleted, the playlist changes.
- Files that are protected cannot be deleted.  
Release protection before deleting the file.