

شحن وحدة البطارية في الخارج

يختلف شكل مخرج الطاقة باختلاف الدول والمناطق.
لشحن وحدة البطارية، أنت بحاجة إلى قابس تحويل يتفق مع شكل المخرج.

A	B	BF	C	O
				

North America		Europe		Oceania		Middle East	
United States	A	Iceland	C	Australia	O	Israel	C
Canada	A	Ireland	C	Guam	A	Iran	C
Mexico	A	United Kingdom	B, BF	Tahiti	C	Kuwait	B, C
Asia		Italy	C	Tonga	O	Jordan	B, BF
		Austria	C	New Zealand	O	Africa	
India	B, C, BF	Netherlands	C	Fiji	O	Algeria	A, B, BF, C
Indonesia	C	Canary Islands	C	Latin		Egypt	B, BF, C
Singapore	B, BF	Greece	C	Argentina	O	Guinea	C
Sri Lanka	B, C, BF	Switzerland	C	Colombia	A	Kenya	B, C
Thailand	A, BF, C	Sweden	C	Jamaica	A	Zambia	B, BF
South Korea	A, C	Spain	A, C	Chile	B, C	Tanzania	B, BF
China	A, B, BF, C, O	Denmark	C	Haiti	A	Republic of South Africa	B, C, BF
Japan	A	Germany	C	Panama	A	Mozambique	C
Nepal	C	Norway	C	Bahamas	A	Morocco	C
Pakistan	B, C	Hungary	C	Puerto Rico	A		
Bangladesh	C	Finland	C	Brazil	A, C		
Philippines	A, BF, O	France	C	Venezuela	A		
Vietnam	A, C	Belgium	C	Peru	A, C		
Hong Kong Special		Poland	B, C				
Administrative Region	B, BF	Portugal	B, C				
Macau Special		Romania	C				
Administrative Region	B, C						
Malaysia	B, BF, C						