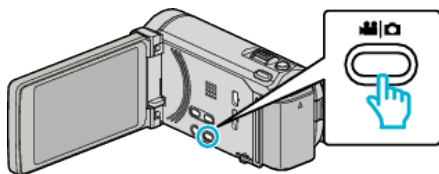## Capturing Smiles Automatically (SMILE SHOT)

"SMILE SHOT" automatically captures a still image upon detection of a smile.
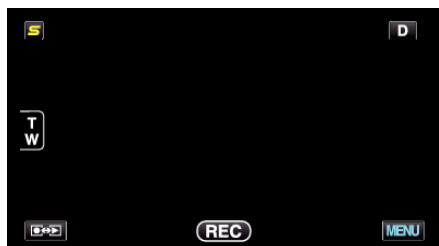This function is available for both videos and still images.

1 Select video or still image mode.

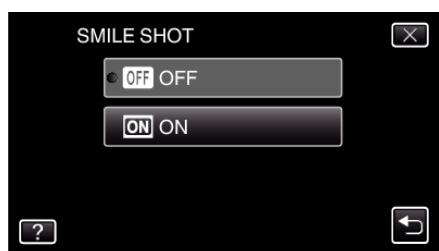● The video or still image mode icon appears.
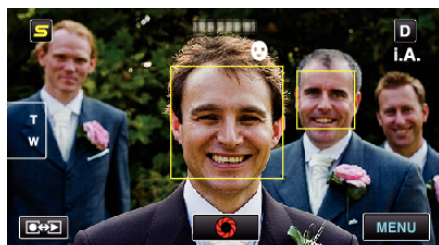
2 Tap "MENU".

3 Tap "SMILE SHOT".

● Tap ∧ or ∨ to move upward or downward for more selection.
● Tap ✕ to exit the menu.
● Tap ↩ to return to the previous screen.

4 Tap "ON".

5 Point the camera toward the human subject.
● A still image is automatically captured when smiles are detected.

● PHOTO lights up when a still image is being captured.
● You can display the name and smile level (%) together with the frame by setting "SMILE%/NAME DISPLAY" in the menu to "ON" before recording.

Memo :
● This function may not work properly depending on the shooting conditions (distance, angle, brightness, etc.) and the subject (direction of face, smile level, etc.). It is also difficult to detect a smile in backlight.
● After a smile is detected and captured, it takes time before the next recording may be performed.
● "SMILE SHOT" does not work in the following cases:
  - when menu is being displayed
  - when remaining recording time or battery power is being displayed
  - when "FACE SUB-WINDOW" is set
  - when "ANIMATION EFFECT" is set

Caution :
● When "TOUCH PRIORITY AE/AF" is set to "AREA SELECT" or "COLOR TRACKING", "SMILE SHOT" does not work.
● If appropriate results cannot be obtained, record with "SMILE SHOT" set to "OFF".