Protecting Selected Files
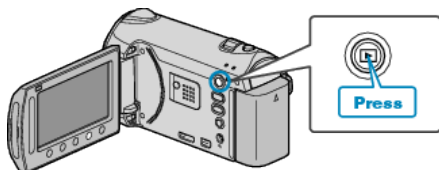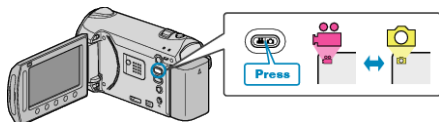
Protects or releases protection of the selected files.
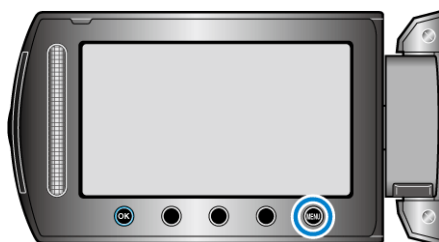
1 Select the playback mode.

2 Select video or still image mode.

3 Touch ⓔ to display the menu.

4 Select "EDIT" and touch ⓚ.

5 Select "PROTECT/CANCEL" and touch ⓚ.

6 Select "FILE SELECT" and touch ⓚ.

7 Select the desired file and touch ⓚ.

● A �On mark appears on the selected file.
To remove the mark, touch ⓚ again.

● Touch "CHECK" to check the selected file.

8 After selecting all the files to protect or release protection of, touch ⓔ.

9 Select "YES" and touch ⓚ.

1