Playing Back Files in the USB External Hard Disk Drive
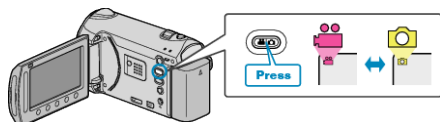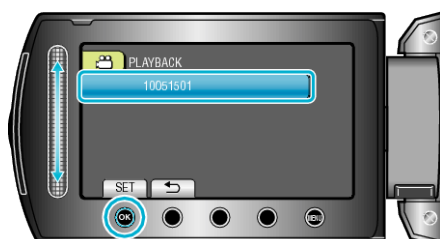
1 Select video or still image mode.

2 Select "PLAYBACK" and touch ⊛.

3 Select the desired folder and touch ⊛.

4 Select the desired file and touch ⊛.

● Touch ■ to stop playback.