شحن وحدة البطارية في الخارج

يختلف شكل مخرج الطاقة باختلاف الدول والمناطق.
لشحن وحدة البطارية، أنت بحاجة إلى قابس تحويل يتفق مع شكل المخرج.

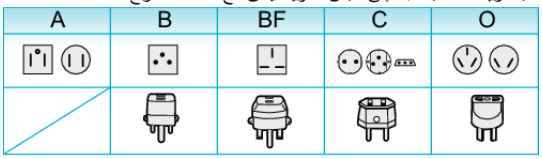

North America	
United States	A
Canada	A
Mexico	A

Asia	
India	B,C,BF
Indonesia	C
Singapore	B,BF
Sri Lanka	B,C,BF
Thailand	A,BF,C
South Korea	A,C
China	A,B,BF,C,O
Nepal	C
Pakistan	B,C
Bangladesh	C
Philippines	A,BF,O
Vietnam	A,C
Hong Kong Special Administrative Region	B,BF
Macau Special Administrative Region	B,C
Malaysia	B,BF,C

Europe	
Iceland	C
Ireland	C
United Kingdom	B,BF
Italy	C
Austria	C
Netherlands	C
Canary Islands	C
Greece	C
Switzerland	C
Sweden	C
Spain	A,C
Denmark	C
Germany	C
Norway	C
Hungary	C
Finland	C
France	C
Belgium	C
Poland	B,C
Portugal	B,C
Romania	C

Oceania	
Australia	O
Guam	A
Tahiti	C
Tonga	O
New Zealand	O
Fiji	O

Latin	
Argentina	BF,C,O
Colombia	A
Jamaica	A
Chile	B,C
Haiti	A
Panama	A
Bahamas	A
Puerto Rico	A
Brazil	A,C
Venezuela	A
Peru	A,C

Tyuukintou	
Israel	C
Iran	C
Kuwait	B,C
Jordan	B,BF

Africa	
Algeria	A,B,BF,C
Egypt	B,BF,C
Guinea	C
Kenya	B,C
Zambia	B,BF
Tanzania	B,BF
Republic of South Africa	B,C,BF
Mozambique	C
Morocco	C