


Operating Details

Displaying Camera's Screen on Smartphone - MONITOR Function

- 1 Switch to the video recording mode.
- 2 Press the "MENU" button to display the settings (SETTINGS) button.



- 3 Tap the settings (SETTINGS) button to display the settings menu.

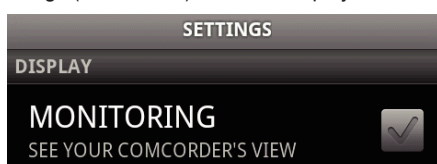

- 4 Tap [MONITORING] to display a check mark in the checkbox.



- 5 Press the "RETURN" button to exit the settings menu.
 - The camera's screen appears on the smartphone.

Canceling the Monitor Display: _____

- Remove the check mark from the checkbox in step 4.

Memo : _____


- Images are displayed as a series of continuous still images.

Displaying the Map During Video or Still Image Playback


- 1 Switch to the video playback mode.
- 2 Press the "MENU" button to display the settings (SETTINGS) button.



- 3 Tap the settings (SETTINGS) button to display the settings menu.



- 4 Tap [SHOW MAP] to display a check mark in the checkbox.



- 5 Press the "RETURN" button to exit the settings menu.
 - When a video or still image is played back, a map will be displayed based on the recorded location information.

Canceling the Map Display: _____

- Remove the check mark from the checkbox in step 4.

Memo : _____


- This function is also available in the still image playback mode.
- To display the map, it is necessary to activate location information transmission during video or still image recording.
- During video playback, the map changes (moves) together with the changes in location information.
- To display the map, internet connection is required. (Packet communication fees may be incurred.)

Recording Location Information

- 1 Switch to the video recording mode.
- 2 Press the "MENU" button to display the settings (SETTINGS) button.



- 3 Tap the settings (SETTINGS) button to display the settings menu.

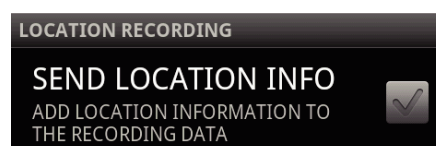

- 4 Tap [SEND LOCATION INFO] to display a check mark in the checkbox.



- 5 Press the "RETURN" button to exit the settings menu.

Canceling Location Information Transmission: _____

- Remove the check mark from the checkbox in step 4.

Memo : _____

- This function is not available if there is no GPS function in the smartphone.
- By default, the location information will be transmitted every 1 second. You can change the transmission interval from the settings menu.

Changing the Transmission Interval

- 1 Switch to the video recording mode.
- 2 Press the "MENU" button to display the settings (SETTINGS) button.



- 3 Tap the settings (SETTINGS) button to display the settings menu.



- 4 Tap [CHANGE INTERVAL] to display the setting window.



- 5 Move the slide bar in the setting window to the right and left to change the interval.
- 6 Tap [OK] to complete the setting.
- 7 Press the “RETURN” button to exit the settings menu.

Canceling the Setting : _____

- Press the “RETURN” button in step 6

Memo : _____

- This function is not available if there is no GPS function in the smartphone.

Displaying Google Map™ : _____

When “Map” is tapped, a map will be displayed on the full screen.


- For operating instructions of the map, refer to the instruction manual of the smartphone.
- To cancel the magnified display of the map, press the “RETURN” button.

Transferring Videos to a Smartphone

- 1 Switch to the video playback mode.
- 2 Tap ◀◀▶▶ to select the video to transfer.
- 3 Tap ▶ to start playback.
- 4 Tap ▶ at the scene to start transferring to pause playback.
- 5 Press the “MENU” button to display the transfer (VIDEO TRANSFER) button, then tap on it.



- 6 Move the slide bar in the setting window to the right and left to select the length of the video.

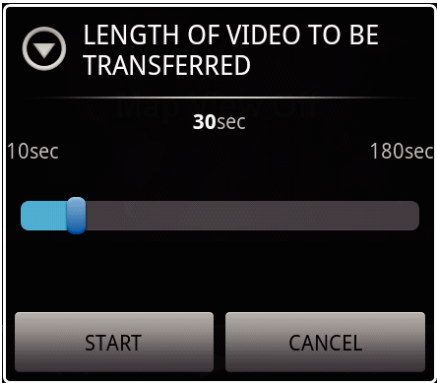


Memo : _____

- The length of video that can be transferred is limited.
By default, it is set to 10 seconds.
You can set the time between 10 seconds to 180 seconds.

- 7 Tap [START].
- Preparation for the transfer starts on the camera, and the transferring starts when preparation is done.
- A progress status is displayed when transferring starts on the smartphone.

- After transferring is complete, a window to select the data processing method appears.

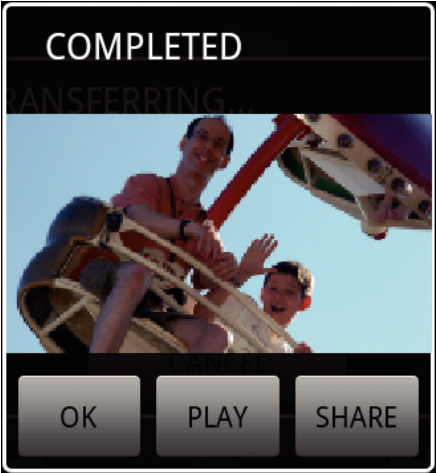

- 8 Tap [OK] to complete the transfer.

Checking the Transferred Video : _____

- Tap [PLAY] in step 8 to play back the transferred video.

Uploading the Transferred Video to Youtube, etc. : _____

- Tap [SHARE] in step 8 to display the list of destinations (services) to upload to.
Tap the desired service to start the uploading process.
- To make use of a service, it is necessary to perform registration beforehand.

Canceling the Transfer : _____


- Tap [CANCEL] in step 7 during transferring.

Transferring Still Images to a Smartphone

- 1 Switch to the video or still image playback mode.
- 2 Tap ◀◀▶▶ to select the still image to transfer.
- 3 Tap ▶ to start playback.
* For still image playback, proceed to step 5.
- 4 For video playback, tap ▶ at the scene to transfer to pause playback.
- 5 Press the “MENU” button to display the transfer (CAPTURE) button.



- 6 Tap the transfer (CAPTURE) button to display the settings menu.
- Preparation for the transfer starts on the camera, and the transferring starts when preparation is done.
- A progress status is displayed when transferring starts on the smartphone.
- After transferring is complete, a window to select the data processing method appears.

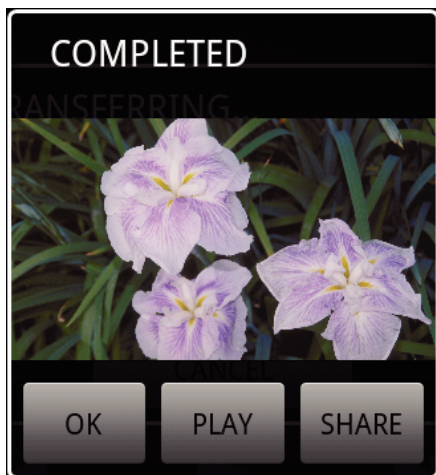

- 7 Tap [OK] to complete the transfer.

Checking the Transferred Still Image: _____

- Tap [PLAY] in step 7 to play back the transferred still image.

Uploading the Transferred Still Image: _____

- Tap [SHARE] in step 7 to display the list of destinations (services) to upload to.
Tap the desired service to start the uploading process.
- To make use of a service, it is necessary to perform registration beforehand.

Canceling the Transfer: _____

- Tap [CANCEL] in step 6 during transferring.

Changing the Connected Camera

- 1 Press the “MENU” button to display the settings (SETTINGS) button.




- 2 Tap the settings (SETTINGS) button to display the settings menu.



- 3 Tap [CHANGE CONNECTING DEVICE] to display the setting window.

- 4 Tap [OK] in the setting window.

- The connection gets disconnected, and a device selection window appears.

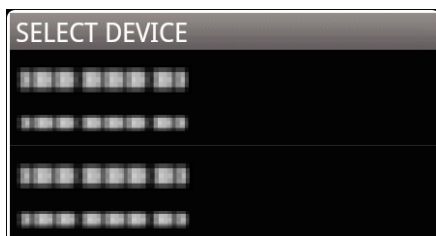

- 5 Tap on the device to connect to from the list displayed in the device selection window.

- The selected device gets connected.

* It is necessary to perform pairing beforehand for the camera to change to.

Canceling the Setting: _____

- Tap [CANCEL] in step 4.

Changing the Software's Background Color


- 1 Press the “MENU” button to display the settings (SETTINGS) button.



- 2 Tap the settings (SETTINGS) button to display the settings menu.



- 3 Tap [BACKGROUND COLOR] to display the setting window.

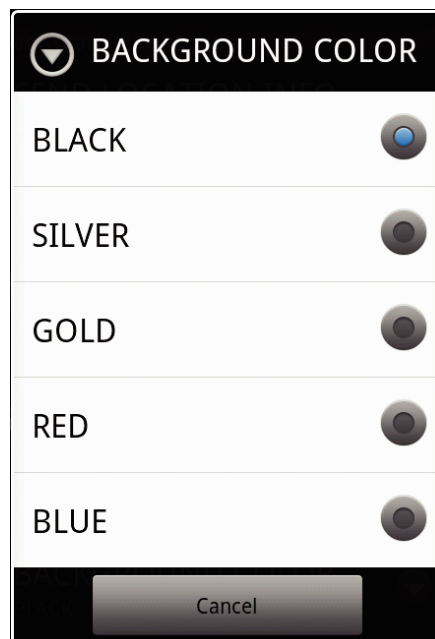

- 4 Tap the desired color in the background color setting window.

- 5 Press the “RETURN” button once.

- The background changes to the selected color.

Canceling the Setting: _____

- Tap [CANCEL] in step 4.

Settings Menu

You can display the settings menu by pressing the “MENU” button.

