

VIDEO QUALITY


Sets the video quality.

Setting	Details	
LS	1280 x 720 pixels 50p	Records in high definition with high quality (16:9).
LE	1280 x 720 pixels 50p	For long recordings in high definition with high quality (16:9).
SSW	720 x 576 pixels 50i	Records in standard definition (16:9).
SEW	720 x 576 pixels 50i	For long recordings in standard definition (16:9).
SS	720 x 576 pixels 50i	Records in standard quality (4:3).
SE	720 x 576 pixels 50i	For long recordings in standard quality (4:3).


- Memo :**
- Set to “LS” mode when recording fast-moving scenes or scenes with extreme changes of brightness to avoid noise.
 - You can change the video quality from the remaining recording time display.
Select the video quality with the UP/< and DOWN/> buttons and press OK.

Displaying the Item

- Memo :**
- To select/move cursor towards up/left or down/right, press the button UP/< or DOWN/>.

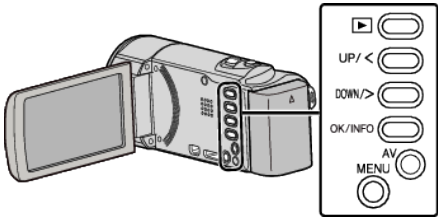

1 Press MENU.

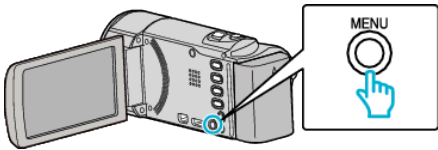

2 Select “VIDEO QUALITY” and press OK.

