



Face Detection Zoom

You can enlarge the part including a face in a still image and save it as a new file.

- 1 Select the playback mode.

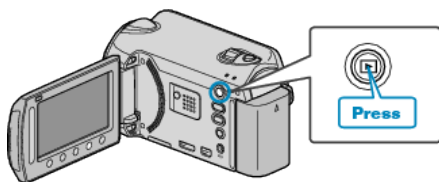

- 2 Select still image mode.

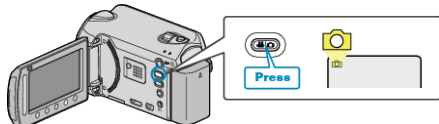

- 3 Select the desired still image and touch **OK**.



- 4 Touch **OK**.



- Faces are detected.

- 5 Select the face to zoom and touch **OK**.




- The face that is highlighted in red is zoomed in.

- 6 Touch **OK** repeatedly to change the zoom ratio.



- To adjust/change zoom area, touch the slider.

- 7 Touch "SAVE".

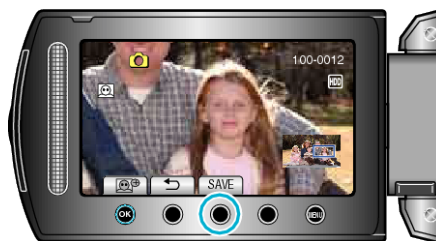

- Zoom images are saved in 16:9 aspect regardless of the original aspect.

- 8 Select "YES" and touch **OK**.



- After saving, touch **OK**.