


## Capturing a Required Part in the Video

Select the required part of a video and save it as a new video file.


1 Select the playback mode.

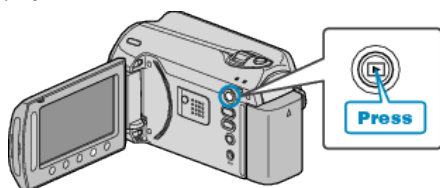

2 Select video mode.



3 Touch  $\odot$  to display the menu.

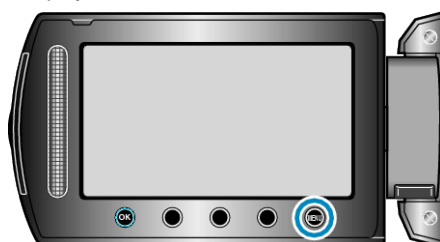

4 Select "EDIT" and touch  $\odot$ .



5 Select "TRIMMING" and touch  $\odot$ .



6 Select the desired video and touch  $\odot$ .



- Playback of the selected video starts.

7 Touch **OK** to pause playback, then touch SET to set the start point.



- Touch **OK** to resume playback.

8 Touch **OK** to pause playback, then touch SET to set the point to stop copying.



- To reset the start point, touch CANCEL.

9 Select "CAPTURE TRIMMED FILE" and touch **OK**.



10 Select "YES" and touch **OK**.



- After copying, touch **OK**.
- When copying finishes, the copied file is added to the index screen.
- To exit the screen, touch **HOME**.

### NOTE:

- According to the MPEG-2 standard, videos are split into units of approximately 0.5 second.  
As such, the division point may not be accurate.