



Capturing a Required Part in the Video

Select the required part of a video and save it as a new video file.


1 Select the playback mode.

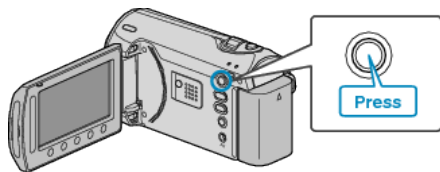

2 Select video mode.

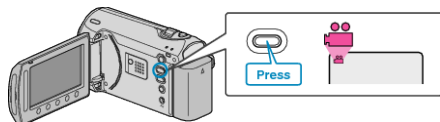

3 Touch \odot to display the menu.

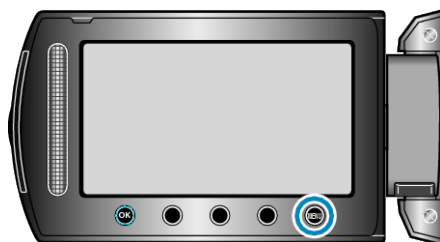

4 Select "EDIT" and touch \odot .



5 Select "TRIMMING" and touch \odot .



6 Select the desired video and touch \odot .




• Playback of the selected video starts.

7 Touch \odot to pause playback, then touch SET to set the start point.



• Touch \odot to resume playback.
"Playing Back Videos" (P. 0)

8 Touch \odot to pause playback, then touch SET to set the point to stop copying.

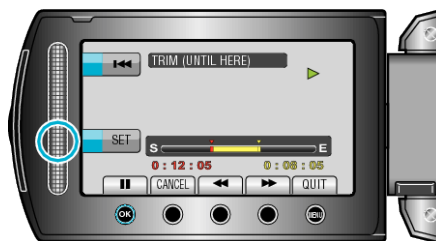

• To reset the start point, touch CANCEL.

9 Select "CAPTURE TRIMMED FILE" and touch \odot .



10 Select "YES" and touch \odot .



• After copying, touch \odot .
• When copying finishes, the copied file is added to the index screen.
• To exit the screen, touch \odot .

NOTE:

• According to the MPEG-2 standard, videos are split into units of approximately 0.5 second.
As such, the division point may not be accurate.