



Face Detection Zoom

You can enlarge the part including a face in a still image and save it as a new file.

- 1 Select the playback mode.

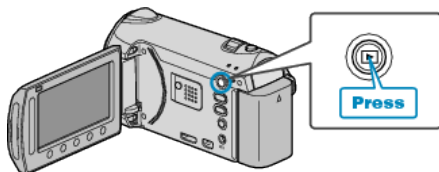

- 2 Select still image mode.

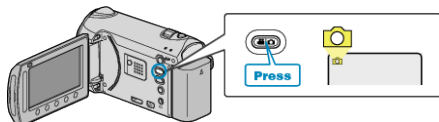

- 3 Select a still image and touch \odot to start playback.



- 4 Touch \odot .



- A frame appears around the face of the subject.

- 5 Select the face to zoom and touch \odot .



- The face that is highlighted in red is zoomed in.


- 6 Touch \odot repeatedly to change the zoom ratio.



- You can select a different subject using the slider.
- To end playback, touch \rightarrow .

Saving Zoomed Images of Subject's Faces

- ① After step 6, touch "SAVE".

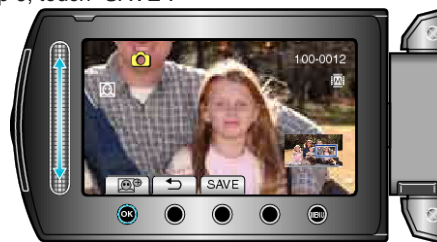

- Zoom images are saved in 16:9 aspect regardless of the original aspect.

- ② Select "YES" and touch \odot .

