


### Backing Up Files Without Using Provided Software


Copy the files to a computer using the following method.

**Memo :**


To select/move cursor towards up/left or down/right, press the button UP/< or DOWN/>.

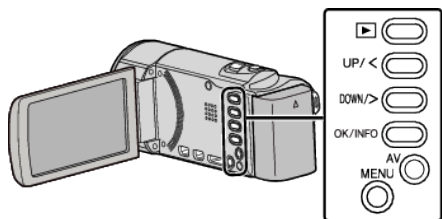

1 Open the LCD monitor.

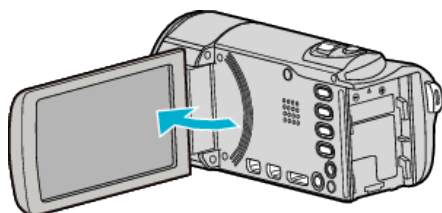

2 Connect the USB cable and the AC adapter.

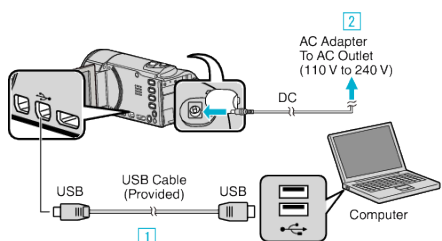

1 Connect using the provided USB cable.

2 Connect the AC adapter to this unit.

• This unit powers on automatically when the AC adapter is connected.

• Be sure to use the supplied JVC AC adapter.

3 The "SELECT DEVICE" menu appears.

3 Select "CONNECT TO PC" and press OK.



• Press UP/< or DOWN/> to move the cursor.

4 Select "PLAYBACK ON PC" and press OK.



- Press UP/< or DOWN/> to move the cursor.
- To cancel and return to the previous screen, press MENU.
- Close the Everio MediaBrowser 3 program, if it starts.
- The subsequent operations are to be performed on the computer.

5 Select "Computer" (Windows Vista) / "My Computer" (Windows XP) / "Computer" (Windows 7) from the "Start" menu, then click on the "JVCCAM\_MEM" or "JVCCAM\_SD" icon.

• Open the folder with the desired files.

6 Copy the files to any folder in the computer (desktop, etc).

**Caution :**

• When the folders or files are deleted/moved/renamed in the computer, they cannot be played back on this unit anymore.


**Memo :**

• To edit/view the files, use a software that supports AVCHD (video) files.

• The above operations on computer may vary with the system used.

### Disconnecting this Unit from Computer

1 Click "Safely Remove Hardware and Eject Media".

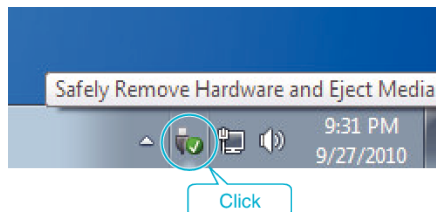

2 Click "Safely Remove USB Mass Storage Device".

3 (For Windows Vista) Click "OK".

4 Disconnect the USB cable and close the LCD monitor.