


---

**Playing Back 3D Images (for GZ-HM970/GZ-HM965)**

Switch to the 3D mode by pressing the 3D button such that the button lights up.

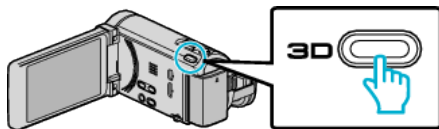

- The mode changes between 3D and 2D with every press of the 3D button. When the 3D mode is activated, the button lights up.

**Caution :** \_\_\_\_\_

- To play back 3D images, refer also to “Precautions on Playing Back 3D Images”.
- Some subjects may appear unnatural when played back in 3D mode. Sometimes, the 3D effect may not even be seen. In this case, it is recommended to play back the video in 2D mode.

**Memo :** \_\_\_\_\_

- 3D images are supported by the LCD monitor of this unit. You can play back 3D images on the LCD monitor. If you are using a 3D compatible TV, you can also play back 3D images by connecting with an HDMI cable.
  - When recording in 3D mode, the image is recorded in 2D even though the display on the LCD monitor is 3D.
  - When 3D images are played back on a 3D compatible TV, the display on the LCD monitor is in 2D.
  - When this unit is connected to a 3D compatible TV via an HDMI cable and set to the recording mode while in 3D mode, 3D images will appear on the TV.
  - The 3D effect of 3D images may appear either too strong or too weak. In these cases, you can correct the 3D effect by adjusting the parallax (3D LEVEL ADJUST).
  - Fatigue or discomfort may be experienced if you view 3D images for a long period of time. When viewing 3D images on this unit, a message will be displayed every 30 minutes. To turn off the message display, set “3D DISPLAY WARNING” to “OFF”.
-